


AES|EBU I/O DB25 PIN OUT

AES/EBU Line Input	DB 25	XLR
Input Channel 1/2	25	1(Gnd)
	24	2(+)
	12	3(-)
Input Channel 3/4	11	1(Gnd)
	10	2(+)
	23	3(-)
Input Channel 5/6	22	1(Gnd)
	21	2(+)
	9	3(-)
Input Channel 7/8	8	1(Gnd)
	7	2(+)
	20	3(-)
AES/EBU Line Output		XLR
Output Channel 1/2	19	1(Gnd)
	18	2(+)
	6	3(-)
Output Channel 3/4	5	1(Gnd)
	4	2(+)
	17	3(-)
Output Channel 5/6	16	1(Gnd)
	15	2(+)
	3	3(-)
Output Channel 7/8	2	1(Gnd)
	1	2(+)
	14	3(-)


Note: PIN 13 is not connected

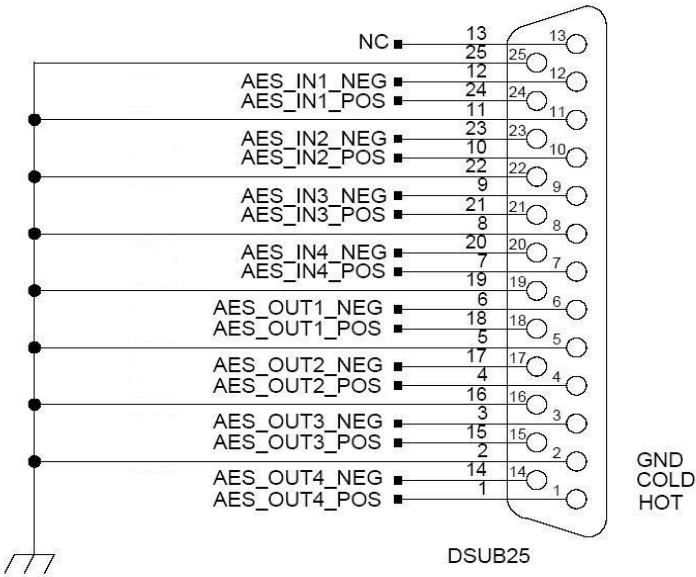

ANALOG INPUT DB25 PIN OUT

Analog Line Input	DB 25	XLR
Input Channel 1	25	1(Gnd)
	24	2(+)
	12	3(-)
Input Channel 2	11	1(Gnd)
	10	2(+)
	23	3(-)
Input Channel 3	22	1(Gnd)
	21	2(+)
	9	3(-)
Input Channel 4	8	1(Gnd)
	7	2(+)
	20	3(-)
Input Channel 5	19	1(Gnd)
	18	2(+)
	6	3(-)
Input Channel 6	5	1(Gnd)
	4	2(+)
	17	3(-)
Input Channel 7	16	1(Gnd)
	15	2(+)
	3	3(-)
Input Channel 8	2	1(Gnd)
	1	2(+)
	14	3(-)

Note: PIN 13 is not connected

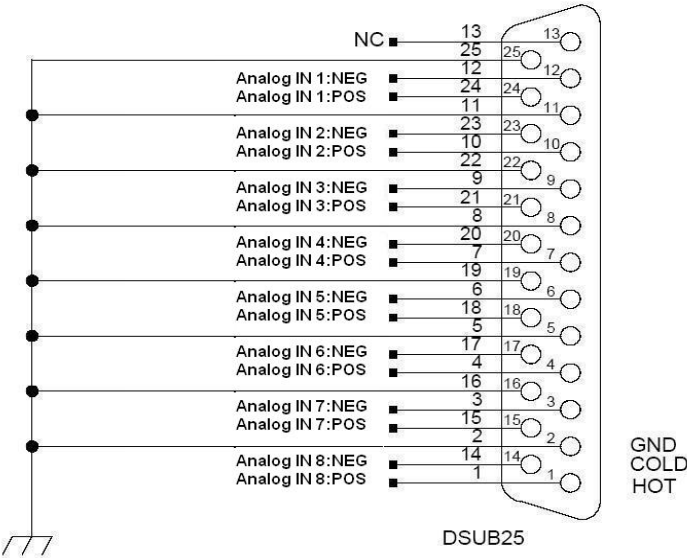

ANALOG OUTPUT DB25 PIN OUT

Analog Line Output	DB 25	XLR
Output Channel 1	25	1(Gnd)
	24	2(+)
	12	3(-)
Output Channel 2	11	1(Gnd)
	10	2(+)
	23	3(-)
Output Channel 3	22	1(Gnd)
	21	2(+)
	9	3(-)
Output Channel 4	8	1(Gnd)
	7	2(+)
	20	3(-)
Output Channel 5	19	1(Gnd)
	18	2(+)
	6	3(-)
Output Channel 6	5	1(Gnd)
	4	2(+)
	17	3(-)
Output Channel 7	16	1(Gnd)
	15	2(+)
	3	3(-)
Output Channel 8	2	1(Gnd)
	1	2(+)
	14	3(-)

Note: PIN 13 is not connected

